



Technical Support Line: (952) 985-5675 Email: Info@QA1.net

INSTALLATION INSTRUCTIONS

QA1 Swaybar Reinforcement Bracket P/N 52107

READ ALL INSTRUCTIONS CAREFULLY AND THOROUGHLY PRIOR TO STARTING INSTALLATION. PRODUCTS THAT HAVE BEEN INSTALLED ARE NOT ELIGIBLE FOR RETURN. USE THE PROPER JACKING LOCATIONS. DEATH OR SERIOUS INJURY CAN RESULT IF INSTRUCTIONS ARE NOT CORRECTLY FOLLOWED. A GOOD CHASSIS MANUAL, AVAILABLE AT YOUR LOCAL PARTS STORE, MAY ALSO AID IN YOUR INSTALLATION.

• DISCLAIMER / WARRANTY •

QA1 WARRANTS THAT THE PRODUCTS WILL BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP FOR ONE YEAR FROM DATE OF SALE TO THE ORIGINAL PURCHASER. QA1 MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. QA1 SHALL HAVE NO OBLIGATION UNDER THE FOREGOING WARRANTY WHERE THE DEFECT IS THE RESULT OF IMPROPER OR ABNORMAL USE, YOUR NEGLIGENCE, VEHICLE ACCIDENT, IMPROPER OR INCORRECT INSTALLATION OR MAINTENANCE, NOR WHEN THE PRODUCT HAS BEEN REPAIRED OR ALTERED IN ANY WAY. QA1'S LIABILITY IN THE CASE OF DEFECTIVE PRODUCTS SUBJECT TO THE FOREGOING WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT QA1'S OPTION, OF THE DEFECTIVE PRODUCTS.

THE USER UNDERSTANDS AND RECOGNIZES THAT RACING PARTS, SPECIALIZED STREET ROD EQUIPMENT, AND ALL PARTS AND SERVICES SOLD BY QA1 ARE EXPOSED TO MANY AND VARIED CONDITIONS DUE TO THE MANNER IN WHICH THEY ARE INSTALLED AND USED. QA1 SHALL BEAR NO LIABILITY FOR ANY LOSS, DAMAGE OR INJURY, EITHER TO A PERSON OR TO PROPERTY, RESULTING FROM THE INSTALLATION, DIRECT OR INDIRECT USE OF ANY QA1 PRODUCTS OR INABILITY BY THE BUYER TO DETERMINE PROPER USE OR APPLICATION OF QA1 PRODUCTS. WITH THE EXCEPTION OF THE LIMITED LIABILITY WARRANTY SET FORTH ABOVE, QA1 SHALL NOT BE LIABLE FOR ANY CLAIMS, DEMANDS, INJURIES, DAMAGES, ACTIONS, OR CAUSES OF ACTION WHATSOEVER TO BUYER ARISING OUT OF OR CONNECTED WITH THE USE OF ANY QA1 PRODUCTS. MOTORSPORTS ARE DANGEROUS; AS SUCH, NO WARRANTY OR REPRESENTATION IS MADE AS TO THE PRODUCT'S ABILITY TO PROTECT THE USER FROM INJURY OR DEATH. THE USER ASSUMES THAT RISK!

TOOLS AND SUPPLIES REQUIRED

- Floor jack
- Jack stands
- Ratchet & SAE Socket Set
- Wire feed MIG/TIG Welder
- Air Grinder
- Wire Brush

Installation

1. Raise and support vehicle to a height that is comfortable to work on the swaybar frame brackets.
2. Remove the swaybar mounting bolts from the bushing brackets and allow the swaybar to swing down out of the way. It is not necessary to remove the swaybar but it may give more room for installation.
3. Clean the edges of the QA1 swaybar reinforcement brackets and frame plates where the swaybar mounts to. Prepare this area for welding.
4. Place the QA1 swaybar reinforcement brackets over the frame plates aligning the holes with the bent lip to the inside frame. The lip should sit flush to the frame. Use the supplied hardware to hold the reinforcement brackets in and weld them to the swaybar frame plates.
5. Reinstall swaybar mounts to the frame at this time. Torque mounting bolts to factory specifications.

To further upgrade your suspension, use other QA1 suspension products such as coil overs, shocks, struts, springs, torque arms, panhard rods, strut tower braces, rod ends, spherical bearings, etc. For more information, visit our website at www.QA1.net

Dedicated Technical Support Team

QA1 is dedicated to providing quality support and instructions. We employ passionate racers and car enthusiasts that know our products and the industry to better serve you.

Check out our tech videos at www.YouTube.com/QA1Tech for:

- Frequently Asked Questions
- Quick Tips
- Install Information
- Tuning and Repair Guides
- Other technical information


Or call to speak with one of our experts: 1.800.721.7761

*Our technical support and order lines are open Monday - Friday. 8 am to 5 pm CST.

 [Facebook.com/QA1Motorsports](https://www.facebook.com/QA1Motorsports)

 [Twitter.com/QA1Motorsports](https://twitter.com/QA1Motorsports)

 [Instagram.com/QA1Motorsports](https://www.instagram.com/QA1Motorsports)

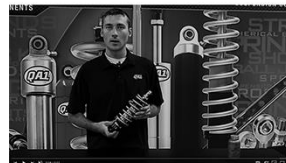

www.QA1.net/Tech